


SHAD

BENELLI LEONCINO 800 / 800 TRAIL '21-

BCN

TOP MASTER B0LN81ST

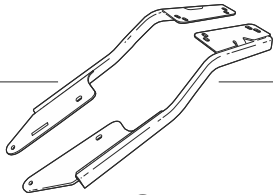

1 263120 x 1 →

2 260121 x 1 ←

3 260686 x 4
Ø16 Ø9 x 8

4 303045 x 4
Ø8

5 303027 x 4
Ø8

6 304028 x 4
M8x25 DIN 7380

WARNING! ⚠

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.


D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

1



BENELLI LEONCINO 800 TRAIL

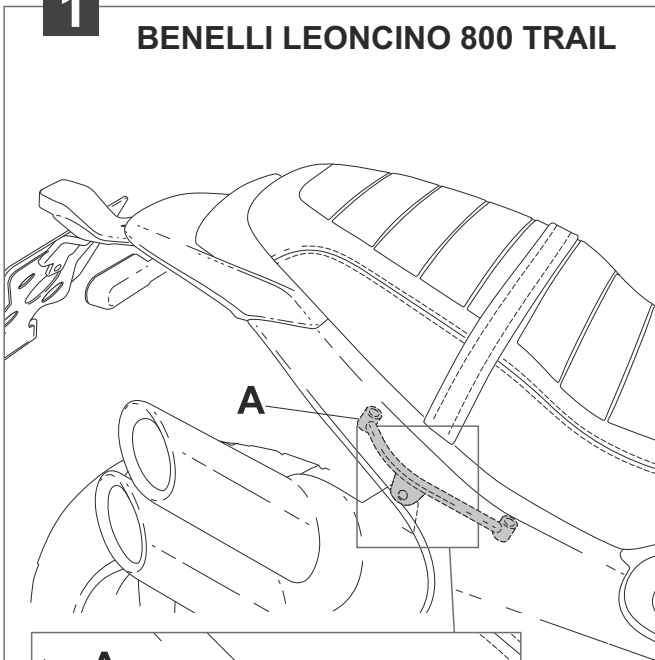

1

x2

BENELLI LEONCINO 800

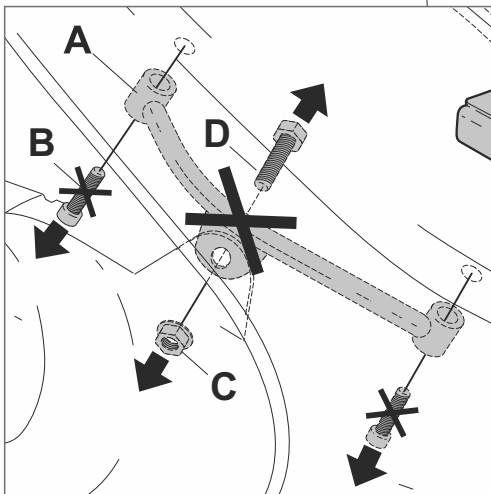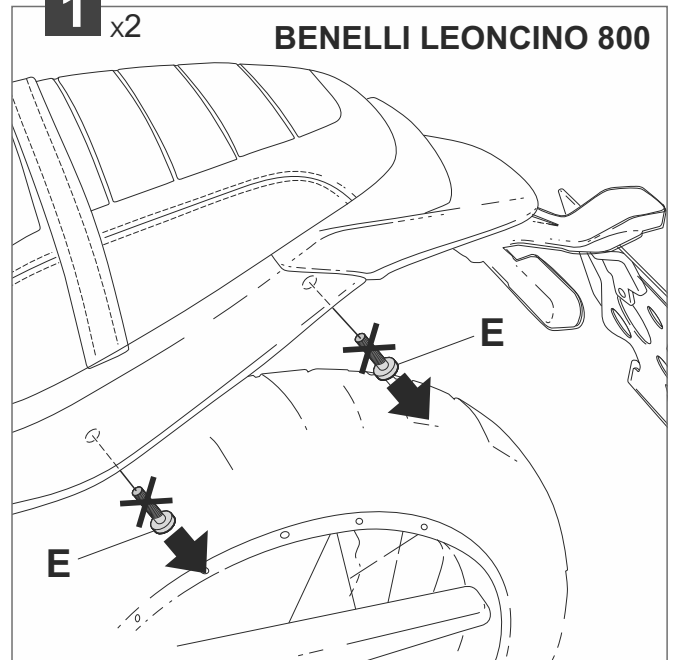

BENELLI LEONCINO 800 / TRAIL x2

2

