

1

PIVOT

Qty: 1



2

Washer

Qty: 2



3

Antitheft screw

Qty: 2



4

PLUG

Qty: 2



### INSTALACIÓN DEL SOPORTE ANTIRROBO

1. Lift the seat of the scooter and remove the screws from the chest.(Image 1)
2. Place the system (Image 2).
3. Attach the bracket to the chest with the antitheft screws, washers and bushings supplied (Image 3).
4. Place the plugs (Image 4)



Figura 1

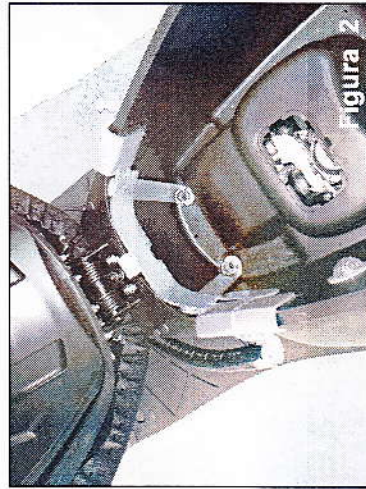


Figura 2

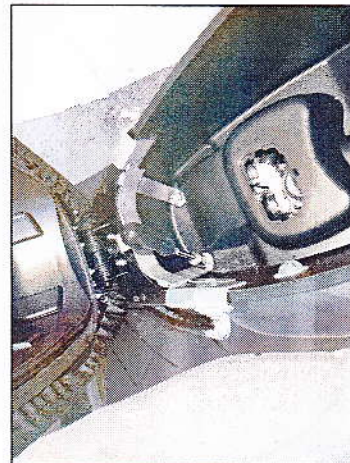


Figura 3

5

SCREW  
M8X60

Qty: 1



6

CASE

Qty: 2



7

ANTITHEFT KEY

Qty: 1



### INSTALACIÓN DEL PIVOTE AL MANILLAR

1. Unscrew the original counterweight (Image 4).
2. Place the supplied counterweight (Image 5).
3. Mount the pivot (Image 6).
4. Fix strongly the pivot.



Figura 5



Figura 6

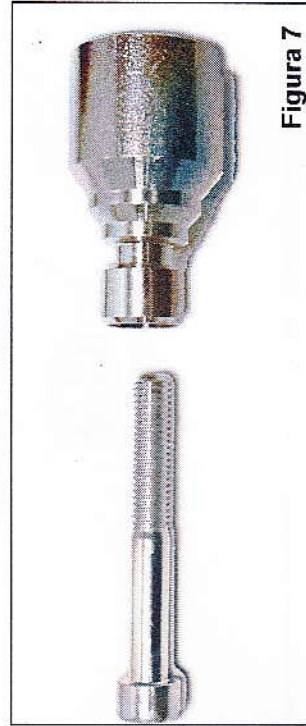


Figura 7